NETGEAR[®]

Wireless Access Point (WNTR2001) ^{User Manual}



350 East Plumeria Drive San Jose, CA 95134 **USA**

May 2011 202-10822-01 v1.0 ©2011 NETGEAR, Inc. All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the written permission of NETGEAR, Inc.

Technical Support

Thank you for choosing NETGEAR. To register your product, get the latest product updates, or get support online, visit us at http://support.netgear.com.

Phone (US & Canada only): 1-888-NETGEAR

Phone (Other Countries): See Support information card.

Trademarks

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc.and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. Information is subject to change without notice. Other brand and product names are registered trademarks or trademarks of their respective holders.

Statement of Conditions

To improve internal design, operational function, and/or reliability, NETGEAR reserves the right to make changes to the products described in this document without notice. NETGEAR does not assume any liability that may occur due to the use, or application of, the product(s) or circuit layout(s) described herein.

Table of Contents

Chapter 1 Getting Started

Hardware Features
Top Panel with LEDs4
Rear Panel
Power Connection Options5
Installation
Preparing to Change Your Internet Adapter Settings
Using the Smart Wizard to Change the Setup

Chapter 2 Advanced Settings

Device Status Screen
Show Statistics
DHCP Connection Status
IP Address
Managing Your Configuration Settings13
Backing Up Settings
Restoring Settings14
Erasing the Settings
Upgrading the Firmware
Advanced Wireless Settings16
Using Push 'N' Connect (WPS)16

Chapter 3 Troubleshooting

Using the USB Power Cable1	8
Connecting to http://www.mywifiext.net	8
Connecting to Wireless Networks	8

Appendix A Factory Settings and Technical Specifications

Factory Settings	
Technical Specifications	

Appendix B Related Documents

Appendix C Notification of Compliance

Getting Started

Hardware Features

Top Panel with LEDs

Top Panel	LED	Activity
	Power	 Solid green: Unit is powered on and operating normally. Solid or blinking amber: Unit is busy. Solid red: Power source does not provide enough power. Off: Unit is not powered on.
U III	LAN	 On: The Ethernet cable is connected. Off: No Ethernet cable is connected.
Rommer AN WEAN	WLAN	 Green: The connection to the router is excellent. Amber: The connection to the router is good. Red: The connection to the router is poor. Off: No wireless connection.

Rear Panel

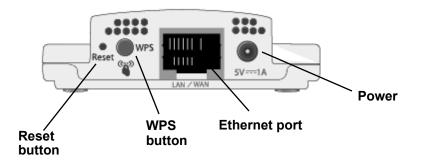


Figure 1. Rear panel

1

Power Connection Options

Depending on the cable that you received with your product, you might need a plug converter to connect the wireless access point to the power adapter. If it is needed, the plug converter is included in the box.



Figure 2. Plug converter

You can power on your wireless access point using either of these methods:

• **Method 1**: Connect the wireless access point to an electrical outlet with the included power adapter.



Figure 3. Power adapter

• **Method 2**: Connect the wireless access point to a USB port on a nearby computer or device with the USB power cable:



Figure 4. USB power cable

Make sure that the device where you connect the USB power cable is powered on. Some USB ports on consumer electronic devices cannot provide the power that the wireless access point requires. In such cases, the power LED turns solid red and the wireless access point may reset itself or turn itself off. If this happens, try connecting the USB cable to a different device, or use the wireless access point power adapter instead.

Installation

The *Wireless Access Point (WNTR2001) Installation Guide* included in the package, explains how to install your wireless access point. The steps are summarized in this section.

- 1. You use a computer to set up the wireless access point. During setup, make sure that your computer is not connected to a router. You can restore the connection after the wireless access point installation is complete.
 - Disconnect the Ethernet cable from your computer if you use it for a wired network connection.
 - If your computer is wirelessly connected to a network, stop your wireless connection.
- 2. Connect the wireless access point.
 - Use an Ethernet cable (included) to connect the wireless access point to your computer.
 - Use either the USB power cable or the power adapter to provide power to the wireless access point. (See *Power Connection Options* on page 5.)
- **3.** Open your Internet browser. It automatically displays the setup page. Follow the instructions on the setup page.
- 4. Disconnect the Ethernet and USB cables from your computer.
- 5. Connect the wireless access point to your TV, Box, or Blu-ray player.

If your device doesn't have a USB port, then use the power adapter cable that came with your wireless access point and plug it into an electrical outlet.

6. Congratulations! Your installation is complete. You can return your computer to its usual set up and begin using the wireless access point.

Preparing to Change Your Travel Router Settings

If you want to change the settings for the wireless access point after installation, then you need to connect it to a computer while you are making changes.

- 1. Connect your wireless access point to a computer with an Ethernet cable.
- 2. Connect either the USB power cable or the power adapter cable that came in the product package to the rear panel of your wireless access point.

To supply power to your wireless access point, use whichever method is more convenient for you. See *Power Connection Options* on page 5.



Figure 5. Connecting the wireless access point to a laptop

3. Launch an Internet browser such as Mozilla Firefox or Microsoft Internet Explorer. In the address field, enter http://www.mywifiext.net.

Unless you changed the settings on the Firmware Upgrade screen (see *Upgrading the Firmware* on page 15), the software automatically checks for new firmware at the NETGEAR website. Then the following screen displays:

NETGEAR SMARTWIZARD Wireless Access Point model WN182001						
WPS Setup Setup Wizard	Device Status	V1	Device Status Help You can use the Device Status screen to check the current settings and			
IP Address Setup Maintenance	Firmware Version GUI Language Version	V1.0.0.21NA V1.0.0.14	statistics for your device. This screen shows you the current settings. If something needs to be changed, you will have to change it on the relevant			
Device Status Backup Settings Firmware Upgrade Advanced Wireless Settings Knowledge Base	Wireless Connection Status Wireless Connection Link Rate (Tx/Rx) Name (SSID) Region Channel Security Type	Connected 54Mbps / 36Mbps Millers United States 6 WPA2-PSK (AES)	screen. Hardware Version: This is the hardware version of this device. Firmware Version: This is the current software the device is using. This will change if you upgrade your device.			
Documentation	LAN Port MAC Address IP Address DHCP Server IP Subnet Mask Gateway IP Address DNS Server Show Statistics	c0:3f.0e:40:d3:05 192:168:1.11 OFF 255:255:255:0 192:168:1.1 192:168:1.1 DHCP Connection	GUI Language Version. This is the current language version the device OUI is using. This will change if you upgrade your device. Wireless Connection Status: These are the current wireless connection status. Wireless Connection - indicates the wireless connection is Connector Disconnect Unk Rate frugho-indicates the V			

The Device Status screen shows what the current settings are for the wireless access point. A menu in the left pane allows you to view or change the settings.

Using the Smart Wizard to Change the Setup

The Smart Wizard helps you set up your wireless access point. For information about advanced configuration, see *Chapter 2, Advanced Settings*.

The *Wireless Access Point (WNTR2001) Installation Guide* included in the package, explains how to install your wireless access point. During installation, when you launch your Internet browser, the Smart Wizard automatically displays.

After installation, to use the Smart Wizard again:

- 1. Connect the wireless access point to a computer and go to http://www.mywifiext.net as described in *Preparing to Change Your Travel Router Settings* on page 6.
- 2. From the menu on the left, select Setup Wizard. The following screen displays:

1-Select Existing Network Plea	se select the name o	f your existir	ng network from the list and	I click 'Continue'
2-Apply Security butto	on below.			
	Name (SSID)	Channel	Security Type	Signal Strength
3-Connect to Existing	PEETS	1	None	100%
Network) BlueKai-G	10	WPAWPA2-PSK [TKIP/AES]	34%
) iWiFi	6	WPA-PSK [TKIP]	24%
4-Review Settings	ONE-StevensCreek	6	WPA2-PSK [TKPI/AES]	24%
deterior octangs	BlueKai-G	2	WPAWPA2-PSK [TKIP/AES]	24%
	PANERA	1	None	20%
		11	WPA-EAP	20%
		11	WPA2-EAP	15%
) veloce	11	WPA-PSK [TKIP]	15%
		9	WPA-EAP	15%
	0	11	None	15%
		2	WPA-EAP	10%
	StaplesHotspot	11	None	10%
	Manually input my wirele	ess SSID		
		Refr	esh Continue	

This is the same Smart Wizard that displays during installation as described in the Installation Guide.

3. You can select a network from the list, or select the **Manually input my wireless SSID** radio button. Click **Continue**. When you have chosen the network that you want to join, the next wizard screen displays. Follow the onscreen prompts to connect to a wireless network:

1-Select Existing Network 2-Apply Security 3-Connect to Existing Network 4-Review Settings	Name (SSID): Security Type:	PEETS None ack Continue
1-Select Existing Network 2-Apply Security 3-Connect to Existing Network	Smart Wizard is connecting WNG This typically takes 2 minutes.	CE2001 to the existing network.

4. When the Review Settings screen displays, click **Finish**. If you are done making changes, disconnect your wireless access point from your computer, and reconnect it to the device on which you want to use it.

Advanced Settings

To change advanced settings, connect the Travel router to your computer and use your Internet browser to go to **http://www.mywifiext.net** as described in *Preparing to Change Your Travel Router Settings* on page 6.

Device Status Screen

When you connect to http://www.mywifiext.net, after the automatic firmware check, the Device Status screen displays:

Hardware Version	V1
Firmware Version	V1.0.0.21NA
GUI Language Version	V1.0.0.14
Wireless Connection Status	
Wireless Connection	Connected
Link Rate (Tx/Rx)	54Mbps/36Mbps
Name (SSID)	Millers
Region	United States
Channel	6
Security Type	WPA2-PSK [AES]
LAN Port	
MAC Address	c0:3f:0e:40:d3:05
P Address	192.168.1.11
DHCP Server	OFF
P Subnet Mask	255.255.255.0
Gateway IP Address	192.168.1.1
DNS Server	192.168.1.1

This screen shows the current settings and the status of your Travel router.

- You can click Show Statistics to see device performance statistics such as the number of packets sent and number of packets received for each port. See Show Statistics on page 11.
- Click **DHCP Status** to see information about your current DHCP connection. See *DHCP Connection Status* on page 12.
- The following table describes the fields in the Device Status screen.

2

Field		Description
Device Status	Hardware Version	The hardware version of the Travel router.
	Firmware Version	The current firmware version of the Travel router. If you upgrade the firmware, this field changes.
	GUI Language Version	The language version running on the Travel router. If you upgrade the firmware, this field changes.
Wireless Connection Status	Wireless Connection	The status of your wireless connection (connected or disconnected).
	Link Rate	The actual transmission (Tx) and receive (Rx) link rate in the current wireless connection
	Name (SSID)	Your Travel router is set up to connect to this SSID, also called the wireless name.
	Region	The location of the Travel router.
	Channel	The wireless channel of the network.
	Security Type	The security setting for the wireless network.
LAN Port	MAC Address	The physical address of the Travel router, as seen from the local area network (LAN).
	IP Address	The IP address of the Travel router. The default is 192.168.1.251.
	DHCP Server	Identifies the network DHCP server on the wireless network.
	IP Subnet Mask	The IP subnet mask associated with the LAN IP address of the Travel router. The default is 255.255.255.0.
	Gateway IP Address	The IP address of the wireless network gateway.
	DNS Server	The IP address of the Domain Name Server (DNS) of the wireless network.

Table 1. Device Status Settings

Show Statistics

On the Device Status screen, click **Show Statistics** to display the following screen:

Port	Status	TxPkts	RxPkts	Collisions	Tx B/s	Rx B/s	Up Time
LAN	100M/Full	1848	2889	0	238	2558	00:12:02
WLAN	300Mbps	2547	10870	0	0	3702	00:12:24
Dol	l Interval :	5	(secs		Setl	nterval	Stop

Table 2. Show Statistics	Fields
-----------------------------	--------

Field	Description
LAN or WLAN	The statistics for the LAN (local), and wireless LAN (WLAN) ports. For each port, the screen displays the following:
Status	The link status of the port.
TxPkts	The number of packets transmitted on this port since reset or the connection was established.
RxPkts	The number of packets received on this port since reset or the connection was established.
Collisions	The number of collisions on this port since reset or the connection was established.
Tx B/s	The current line utilization—percentage of current bandwidth used on this port.
Rx B/s	The average line utilization for this port.
Up Time	The time elapsed since the last power cycle, reset, or when the connection was established.
Poll Interval	Specify the poll interval frequency. If you change this value, click Set Interval so that your change takes effect.

DHCP Connection Status

On the Device Status screen, click **DHCP Connection Status** to view the following screen:

IP Address	192.168.1.11
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
DHCP Server	192.168.1.1
DNS Server	192.168.1.1 0.0.0.0
Lease Obtained	0 Day,00 Hours,01 Minutes,58 Seconds
Lease Expires	0 Day,23 Hours,58 Minutes,02 Seconds

This screen shows the status of the Internet connection.

Table 3.	Connection	Status Fields	
----------	------------	---------------	--

Field	Description
IP Address	The IP address of the wireless network router.
Subnet Mask	The subnet mask associated with the IP address.
Default Gateway	The IP address of the gateway.
DHCP Server	The IP address of the DHCP server.
DNS Server	The IP address of the domain name server (DNS).
Lease Obtained	The date when the lease was obtained.
Lease Expires	The date when the lease expires.

IP Address

From the Travel router menu at http://www.mywifiext.net, under the Maintenance heading, select **IP Address**. The following screen displays:

Oet Dynamically From Router							
◯ Use Static IP Address							
IP Address	192		168		1	•	251
IP Subnet Mask	255		255		255		0
Gateway IP Address	0].	0].	0		0
Primary DNS	0		0		0	•	0
Secondary DNS	0	1.	0	1.	0		0

This screen shows whether the Travel router is set to get its IP address dynamically from the router (this is the most common setting), or is set as a static IP address.

- **Get Dynamically From Router**: The wireless network router assigns an IP address when the Travel router connects to its wireless network. Most networks are set up so that the router automatically does this.
- Use Static IP Address: Specify a static IP address. This is not usually necessary. If you set this up, you should be technically experienced or have a technically experienced person help you.
 - IP Address: The static IP address.
 - IP Subnet Mask: The subnet mask associated with the IP address.
 - Gateway IP Address:
 - Primary DNS: The primary domain name server (DNS).
 - Secondary DNS: The secondary domain name server (DNS).

Managing Your Configuration Settings

From the Travel router menu at http://www.mywifiext.net, under the Maintenance heading, select **Backup Settings**. The following screen displays

Backup Se	ttings
Save a copy of	current settings Back Up
Restore saved	settings from a file Browse Restore
Revert to facto	ry default settings Erase

The Backup and Restore options in the Backup Settings screen let you save and retrieve a file containing your Travel router's configuration settings. Once you have your Travel router working correctly, you should back up the information to have it available if something goes wrong. When you back up the settings, they are saved as a file on your computer. You can restore the device's settings from this file.

Backing Up Settings

- 1. Click **Back Up**. Your browser extracts the configuration file from the Travel router.
- 2. If you do not have your browser set up to save downloaded files automatically, locate where you want to save the file.
- 3. You can give the file a meaningful name at this time, such as internet_adapter.cfg.

Restoring Settings

- 1. On the Backup screen, click Browse.
- 2. Locate and select the previously saved backup file.
- 3. Click Restore.

A screen displays letting you know that the device has been successfully restored to the previous settings. The Travel router will restart. This will take about 1 minute.



CAUTION:

Do not try to go online, turn off the Travel router, shut down the computer, or do anything else to the Travel router until it finishes restarting!

4. Close the message window.

To restore your settings from a saved configuration file, enter the full path to the file on your computer, or click **Browse** to browse to the file. When you have located it, click **Restore** to send the file to the Travel router. The Travel router then reboots automatically.

Erasing the Settings

Under some circumstances (for example, if you have lost track of the changes that you made to the Travel router settings), you might want to erase the configuration. After an erase, the Travel router returns to its factory settings (see *Factory Settings* on page 20).

To erase the configuration, click the **Erase** button in the Backup Settings screen.



CAUTION:

Do not try to go online, turn off the Travel router, shut down the computer, or do anything else to the Travel router until it finishes restarting!

Upgrading the Firmware

Unless you changed the settings in the Firmware Upgrade screen previously, the Travel router is set up to check for new firmware automatically at log in.

If you do not want to use the automatic firmware check, clear the **Check for new version upon login** check box.

To check for firmware and upgrade if it is available:

1. From the Travel router menu at http://www.mywifiext.net, under the Maintenance heading, select **Firmware Upgrade**. The following screen displays:

Firmware Upgrade	
Check for New Version from the Internet	Check
Locate and select the upgrade file on your h	ard disk. Browse
Upload Cancel	

- Click Check to see if new firmware is available. If it is, follow the onscreen prompts to download it onto your computer.
- 3. Use the **Browse** field to locate and select the new firmware.
- 4. Click **Upload** to install the new firmware on your Travel router.



CAUTION:

Once you start the firmware upgrade, do not try to go online, turn off the Travel router, shut down the computer, or do anything else to the Travel router until it finishes restarting!

Advanced Wireless Settings



CAUTION:

The Travel router is already configured with the optimum settings. Do not alter these settings unless directed by NETGEAR support. Incorrect settings might degrade the wireless performance of the Travel router.

To view or change the advanced wireless settings:

From the Travel router menu at http://www.mywifiext.net, under the Advanced heading, select **Wireless Settings**. The following screen displays

ragmentation Length (256-2346)	2346
CTS/RTS Threshold (1-2347)	2346
Preamble Mode	Long Preamble

You can view or configure the following settings:

- **Fragmentation Length (256-2346)**: This is the maximum packet size used for fragmentation. Packets larger than the size programmed in this field are fragmented.
- **CTS/RTS Threshold (1-2347)**: The packet size that is used to determine whether it should use the CSMA/CA (Carrier Sense Multiple Access with Collision Avoidance) mechanism for wireless packet transmission.
- **Preamble Mode**. An Auto setting might give slightly better performance. A Long setting might provide a more reliable connection or slightly longer range.

Using Push 'N' Connect (WPS)


WPS (WiFi Protected Setup) lets you connect to a wireless network without entering its passphrase or wireless key. Instead, you use a button or enter a PIN to connect.

If you have a NETGEAR router, this feature is called Push 'N' Connect. Look for the symbol on the router to make sure the NETGEAR router supports WPS. For non-NETGEAR routers, refer to the user manual to determine if the router supports WPS.

Note: The *Wireless Travel Router (WNTR2001) Installation Guide* explains how to use WPS during installation.

To join a network using WPS after installation:

1. From the Travel router menu at http://www.mywifiext.net, under the Setup heading, select **WPS**. The following screen displays:

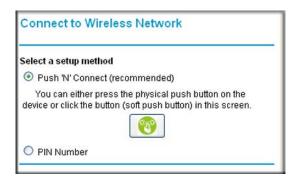

- 2. Select a radio button.
 - **Push and Connect (recommended)**. Either click the 🕎 button or press the WPS button on the rear panel of the Travel router.
 - **PIN Number**. Select the radio button and a PIN displays.

The Travel router tries to join the wireless network for 2 minutes if you are using Push 'N' Connect, or 4 minutes if you are using a PIN.

- **3.** Go to the router.
 - If you are using Push 'N' Connect, press the router's WPS button.
 - If you are using a PIN, log in to the router and type the PIN from your Travel router in its WPS screen.
- 4. Go back to the computer that is connected to the Travel router, and make sure that you are connected to the wireless network.
 - When WPS is running, the WLAN LED blinks, alternating between green and amber.
 - If the computer does not to connect with WPS, the WLAN LED is solid red for 5 seconds.
 - If the computer does connect using WPS, the WLAN LED is solid green for 5 seconds

Then the WLAN LED returns to indicating a wireless signal.

Using the USB Power Cable

You can connect the USB power cable to a USB port on a nearby device. If the Travel router is not getting enough power, the following can occur:

- The Power LED is red.
- The Travel router resets itself intermittently or turns itself off.

Check to make sure that the device with the USB port is powered on. If so, it is likely that the USB port you are connected to does not provide enough power for the Travel router. Try using the power adapter. See *Power Connection Options* on page 5.

Connecting to http://www.mywifiext.net

When I launched my browser, I got an error page. What can I do?

- Make sure that you include http:// when you type this URL in the address field of your Internet browser. If you leave it out, you might not be able to connect.
- If you started up your computer, connected the Ethernet cable to the Travel router, and launched your browser quickly, the computer might still need a couple of minutes to recognize the Ethernet LAN connection. Try launching your browser again.

If the problem continues, make sure that your Ethernet cable is securely connected to the Travel router and the computer, and that the Travel router LAN LED is on. If not, reconnect the Ethernet cable, and re-launch your Internet browser.

Connecting to Wireless Networks

To join a wireless network you must know its network name (also called the SSID) so that you can select it. If the network is secure, you must know the passphrase or wireless key. If the Travel router does not connect to the network that you chose, the following message displays:

Connection was not established to the selected network.

If this happens it could be due to one of these reasons:

- If you are unable to join the wireless network, it is possible that the network name, or passphrase or key was typed incorrectly. Click **Cancel**, use the Smart Wizard to select the network from the list and retype the passphrase or key. This is case-sensitive. PASSWORD25 is not the same as Password25 or password25. See Using the Smart Wizard to Change the Setup on page 8.
- If the Smart Wizard does not find your wireless network (it is not displayed in the Select Existing Network screen) check to see if your wireless network is still up and running. Make sure the router is turned on. If possible, move the Travel router closer to the router and click **Try Again**. If after repeated attempts to connect, you are still seeing this message, you might need to upgrade your router to one that provides greater wireless range, or purchase a range extender to extend its wireless range to your location.
- If the Travel router WLAN LED is red, this could indicate a poor wireless connection, or it could mean that no data is being sent over the wireless link.
 - First, try using your computer to access the Internet. See if the WLAN LED turns a different color when data is sent wirelessly.
 - If the wireless connection is poor, check the location of the Travel router and the router. The best connection is established when there is a clear line of sight between the Travel router and the router you are connecting to. Make sure there are no physical obstacles between the Travel router and the router, and try to move the Travel router closer to the router.

Factory Settings and Technical Specifications



Factory Settings

You can use the Reset button on the rear panel to return your adapter to its factory settings.



Figure 6. The Reset button restores factory settings

Use a pin or paperclip to press the Reset button and hold it for 5 seconds until the power LED blinks amber.

Table 4.

Factory Se	Factory Settings				
Smart Wizard		Enabled			
Wireless	Wireless communication	Disabled			
	Wireless Network Name (SSID)	Any (will connect to the first wireless network that responds)			
	Security	Disabled			
	Transmission speed	Auto ¹			
	Country/Region	United States (varies by region)			
	Operating mode	802.11n, 802.11g, 802.11b			
	Data rate	Up to 300 Mbps			

1 Maximum wireless signal rate (IEEE Standard 802.11). Actual throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate

Technical Specifications

Table 5.

Feature	Description
Antenna	2 PIFA antennae
Radio Data Rate	Auto Rate Sensing
Frequency	2.4 GHz to 2.5 GHz CCK and OFDM Modulation
Power	5V 1A
Emissions	FCC, CE
Bus interface	USB 2.0
Operating Environment	Operating temperature: 0 to 40° C
Encryption	WPA2, WPA, WEP

Related Documents



This appendix provides links to reference documents you can use to gain a more complete understanding of the technologies used in your NETGEAR product.

Table 6.

Document	Link
Windows XP and Vista Wireless Configuration Utilities Application Note	http://documentation.netgear.com/reference/enu/winzerocfg/index.htm
Internet Networking and TCP/IP Addressing:	http://documentation.netgear.com/reference/enu/tcpip/index.htm
Wireless Communications:	http://documentation.netgear.com/reference/enu/wireless/index.htm
Preparing a Computer for Network Access:	http://documentation.netgear.com/reference/enu/wsdhcp/index.htm
Glossary:	http://documentation.netgear.com/reference/enu/glossary/index.htm

Notification of Compliance



Regulatory Compliance Information

This section includes user requirements for operating this product in accordance with National laws for usage of radio spectrum and operation of radio devices. Failure of the end-user to comply with the applicable requirements may result in unlawful operation and adverse action against the end-user by the applicable National regulatory authority.

Note: This product's firmware limits operation to only the channels allowed in a particular Region or Country. Therefore, all options described in this user's guide may not be available in your version of the product.

FCC Requirements for Operation in the United States

FCC Information to User

This product does not contain any user serviceable components and is to be used with approved antennas only. Any product changes or modifications will invalidate all applicable regulatory certifications and approvals

FCC RF Radiation Exposure

RF Exposure Information

The radio module has been evaluated under FCC Bulletin OET 65C (01-01) and found to be compliant to the requirements as set forth in CFR 47 Sections, 2.1093, and 15.247 (b) (4) addressing RF Exposure from radio frequency devices. This model meets the applicable government requirements for exposure to radio frequency waves.

FCC Declaration of Conformity

We, NETGEAR, Inc., 350 East Plumeria Drive, San Jose, CA 95134, declare under our sole responsibility that the Wireless Travel Router (WNTR2001) complies with Part 15 Subpart B of FCC CFR47 Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

FCC Radio Frequency Interference Warnings & Instructions

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an electrical outlet on a circuit different from that which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canadian Department of Communications Radio Interference Regulations

This digital apparatus, Wireless Travel Router (WNTR2001), does not exceed the Class B limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Europe – EU Declaration of Conformity

€€

Marking by the above symbol indicates compliance with the Essential Requirements of the R&TTE Directive of the European Union (1999/5/EC).

This equipment meets the following conformance standards:

- EN300 328 (2.4Ghz), EN301 489-17, EN60950-1
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.
- In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to
 use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or
 network services.
- This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

For complete DoC please visit the NETGEAR EU Declarations of Conformity website at: http://kb.netgear.com/app/answers/detail/a_id/11621/

Language	Statement
Cesky [Czech]	NETGEAR Inc. tímto prohlašuje, že tento Radiolan je ve shode se základními požadavky a dalšími príslušnými ustanoveními smernice 1999/5/ES.
Dansk [Danish]	Undertegnede <i>NETGEAR Inc.</i> erklærer herved, at følgende udstyr Radiolan overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Deutsch [German]	Hiermit erklärt <i>NETGEAR Inc.</i> , dass sich das Gerät Radiolan in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Eesti [Estonian]	Käesolevaga kinnitab <i>NETGEAR Inc.</i> seadme Radiolan vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
English	Hereby, <i>NETGEAR Inc.</i> , declares that this Radiolan is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Español [Spanish]	Por medio de la presente <i>NETGEAR Inc.</i> declara que el Radiolan cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Table 7.

Та	bl	е	7	
-	-	-		

Language	Statement	
Ελληνική [Greek]	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ <i>ΝΕΤGEAR Inc.</i> ΔΗΛΩΝΕΙ ΟΤΙ Radiolan ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.	
Français [French]	Par la présente <i>NETGEAR Inc.</i> déclare que l'appareil Radiolan est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.	
Italiano [Italian]	Con la presente <i>NETGEAR Inc.</i> dichiara che questo Radiolan è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.	
Latviski [Latvian]	Ar šo <i>NETGEAR Inc.</i> deklarē, ka Radiolan atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.	
Lietuvių [Lithuanian]	Šiuo <i>NETGEAR Inc.</i> deklaruoja, kad šis Radiolan atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.	
Nederlands [Dutch]	Hierbij verklaart <i>NETGEAR Inc.</i> dat het toestel Radiolan in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.	
Malti [Maltese]	Hawnhekk, <i>NETGEAR Inc.</i> , jiddikjara li dan Radiolan jikkonforma mal-htigijiet essenzjali u ma provvedimenti ohrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.	
Magyar [Hungarian	Alulírott, <i>NETGEAR Inc.</i> nyilatkozom, hogy a Radiolan megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.	
Polski [Polish]	Niniejszym NETGEAR Inc. oświadcza, że Radiolan jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.	
Português [Portuguese]	<i>NETGEAR Inc.</i> declara que este Radiolan está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.	
Slovensko [Slovenian]	NETGEAR Inc. izjavlja, da je ta Radiolan v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.	
Slovensky [Slovak]	NETGEAR Inc. týmto vyhlasuje, že Radiolan spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.	
Suomi [Finnish]	<i>NETGEAR Inc.</i> vakuuttaa täten että Radiolan tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.	
Svenska [Swedish]	Härmed intygar <i>NETGEAR Inc.</i> att denna Radiolan står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.	

Table 7.

Language	Statement
Íslenska [Icelandic]	Hér með lýsir <i>NETGEAR Inc.</i> yfir því að Radiolan er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC.
Norsk [Norwegian]	<i>NETGEAR Inc.</i> erklærer herved at utstyret <i>Radiolan</i> er i samsvar med de grunnleggende krav og øvrige relevante krav i direktiv 1999/5/EF.

Interference Reduction Table

The table below shows the Recommended Minimum Distance between NETGEAR equipment and household appliances to reduce interference (in feet and meters).

Table 8.

Household Appliance	Recommended Minimum Distance	
	(in feet and meters)	
Microwave ovens	30 feet / 9 meters	
Baby Monitor - Analog	20 feet / 6 meters	
Baby Monitor - Digital	40 feet / 12 meters	
Cordless phone - Analog	20 feet / 6 meters	
Cordless phone - Digital	30 feet / 9 meters	
Bluetooth devices	20 feet / 6 meters	
ZigBee	20 feet / 6 meters	